
Quick Guide to CAMEO[™]-96

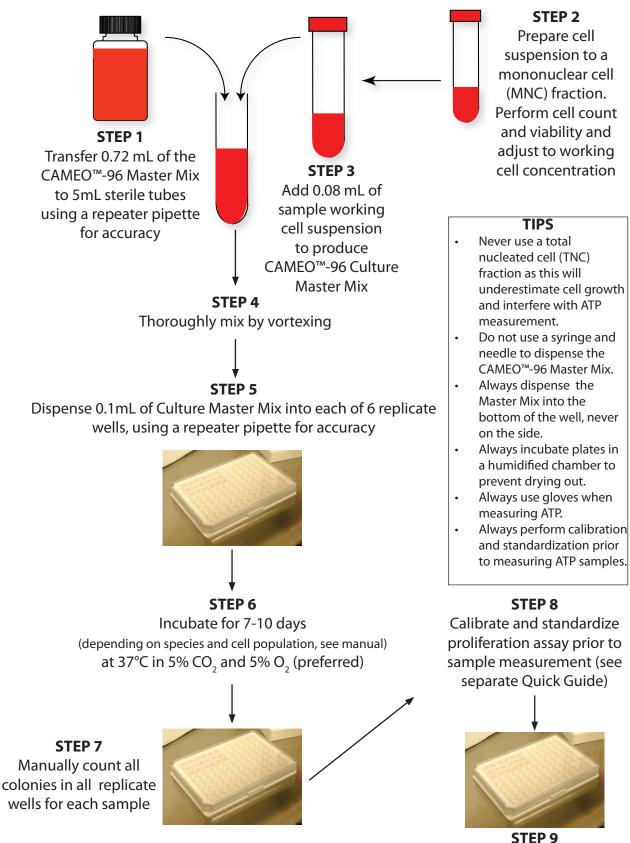

HemoGenix[®]

Add 0.1mL of ATP-ER to each well, mix and measure bioluminescence after 10 min incubation in the dark